


Dimmable Recessed LED Downlight

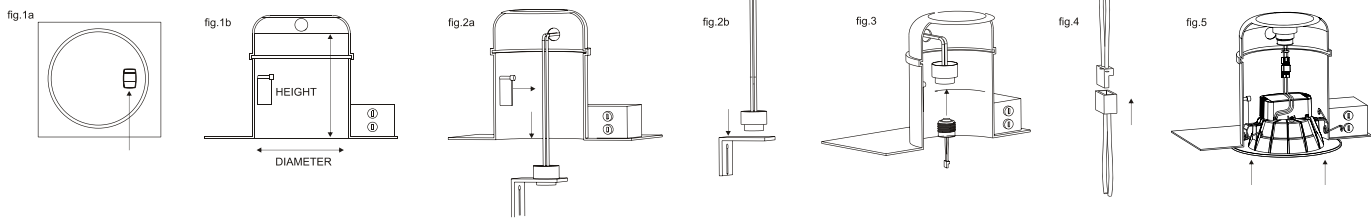

INSTALLATION 6" INCANDESCENT HOUSING

Step 1. Make sure the POWER IS TURNED OFF at the source to the recessed housing inside which you are installing. Once power has been turned off, remove existing trim and bulb.

Step 2. Unscrew the lamp socket mounting bracket inside the recessed housing (fig.2a). Unclip the lamp socket from the bracket and remove the bracket.

Step 3. Screw Edison base adaptor into the socket (fig.3).

Step 4. Plug the female connector of the retrofit kit to the male connector of the socket adaptor (fig. 4).

Step 5. Squeeze the springs of the retrofit kit and insert them inside the housing retaining bracket (fig.5). Carefully tuck all the wire inside the can and gently push retrofit kit up flush into ceiling surface.




INSTALLATION 6" LED HOUSING

Step 1. Plug the female connector of the retrofit kit onto the male connector of the LED housing(fig.4). And then proceed to Step 5 above.

HOUSING COMPATABILITY

Compatible with most standard 6"insulated and non-insulated housings that have spring retaining brackets inside the can(fig.1a). Compatibility of housing may be determined by measurement of the housing as detailed in (fig.1b).

CONVERT TO 6"

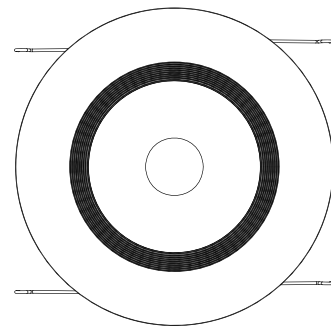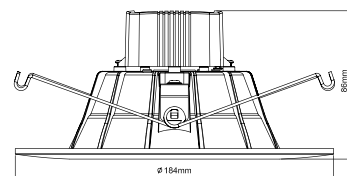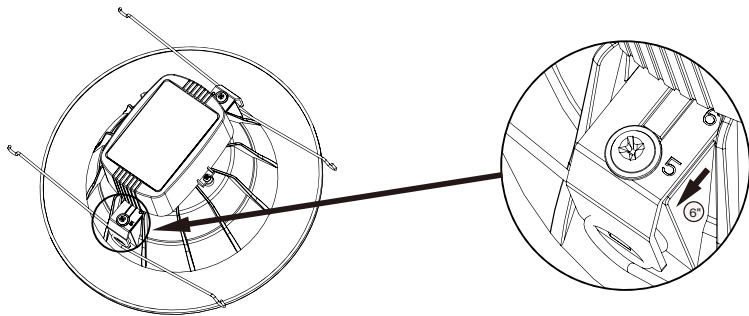

Product Dimension